



FLEXIMASTER™ POINT DRIVER OPERATING INSTRUCTIONS

FLEXIMASTER NAGELPISTOLE BENUTZUNG UND WARTUNG Seite 4

ENFONCEUR DE POINTES FLEXIMASTER™ CONSIGNES D'UTILISATION Page 7

GUIADOR DE PUNTAS FLEXIMASTER™ INSTRUCCIONES DE OPERACION Página 10



THE FLETCHER-TERRY COMPANY


65 Spring Lane Farmington, Connecticut USA 06032-3139 • (203) 677-7331 • 800-843-3826
FAX (203) 676-8858

Form 111594

OPERATION

LOADING POINTS (See **Figure 1**)

1. Pull the **FOLLOWER KNOBS (A)** up and rotate to the locked position.
2. Insert a stack of FlexiPoints **(B)** (176 points per stack) in the **MAGAZINE (C)** with the notch to the right and release the **FOLLOWER KNOB** so it will apply pressure to the points.
3. Reload a stack of points when the **FOLLOWER KNOB** reaches the reload position.
4. The Fletcher FlexiMaster points are available in boxes of 3,700, order no. 08-955, or 10,000, order no. 08-965.

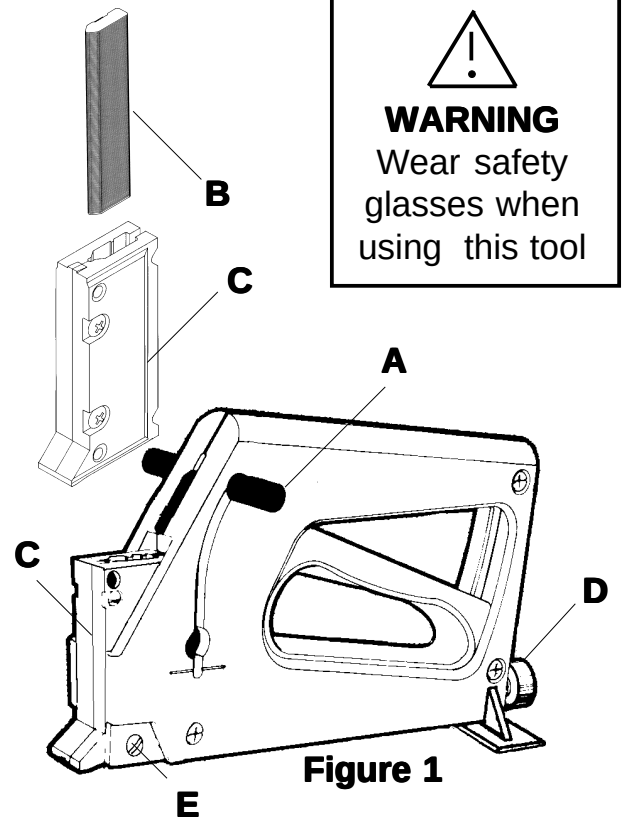

USING THE FLEXIMASTER

1. Back up the wood frame with a solid object to absorb the shock and assure maximum penetration. Place the FlexiMaster on the backing and hold it tight against the wood as you pull the trigger.
2. After inserting enough points to hold the glass, artwork, mat and backing, turn the frame right side up for inspection.
3. If it is necessary to clean the glass again, bend the Flexi-Points up, remove the glass, clean and replace it. Then bend the points back down.
4. The depth of penetration of the point can be adjusted by turning the **ADJUST-ABLE KNOB (D)**. Clockwise increases depth, counterclockwise decreases depth.

CAUTION: Do not operate the FlexiMaster while pointed at any object other than the frame. Points can inflict injury.

MAINTENANCE AND TROUBLE SHOOTING

PROBLEM	PROBABLE CAUSE	CORRECTION
Does not fire point.	MAGAZINE empty.	Reload stack of points.
	Point jammed.	Remove points. Remove screw (E) , and pull MAGAZINE out of driver. Discard jammed point.
	Magazine locking screw (E) loose.	Tighten screw and nut firmly.
Fires 2 points at once.	Magazine locking screw (E) loose.	Tighten screw and nut firmly.
Point penetration not deep enough.	Frame not firmly backed up and point driver not held tight against the wood.	Support the frame and hold the point driver tightly against the wood.
	Pressure adjustment too low.	Turn the ADJUSTABLE KNOB (D) clockwise.

NO.	ORDER #	PART NAME	QTY.	NO.	ORDER #	PART NAME	QTY.
1	12-900	Handle (Right Hand)	1	14	12-713	Spring Stop Plate	1
2	12-901	Handle (Left Hand)	1	15	12-714	Main Spring	1
3	12-902	Trigger Assembly	1	16	12-715	Guide Pin	3
4	12-732	Magazine Assembly	1	17	12-716	Adjustable Knob	1
5	12-704	Follower Assembly	1	18	12-717	Square Nut	1
6	12-904	Channel	1	19	12-718	Washer	1
7	12-905	Push Plate	1	20	12-719	Follower Spring	1
8	12-707	Bumper	1	21	12-720	Cap	1
9	12-708	Stop Bar	1	22	12-721	Trigger Spring	1
10	12-709	Hammer	1	23	12-722	Pan Head Screw	2
11	12-710	Pawl	1	24	12-723	Plastite Screw	3
12	12-711	Pawl Pin	1	25	12-731	Magazine Screw	1
13	12-712	Torsion Spring	1	26	12-725	Magazine Nut	1

