

Synth edit mode

Power On

Octave 1

Major

Octave 2

Sequence 1

Sequence 2

Sequence 3

Sequence 4

Sequence 5

Sequence 6

Sequence 7

Sequence 8

Octave 3

Minor

Octave 4

Power On

Carrier wave select

Modulator wave select

Modulator frequency

Intensity 1

Intensity 2

Modulation speed

Sequencer speed

Playback mode or Edit mode / Selector Synth 1-8

Carrier Frequency synth 1

Carrier Frequency synth 2

Carrier Frequency synth 3

Carrier Frequency synth 4

Carrier Frequency synth 5

Carrier Frequency synth 6

Carrier Frequency synth 7

Carrier Frequency synth 8

Note 1
Hold (Scale Select)

Note 2
Hold (Scale Select)

Note 3

Note 4

Note 5

Note 6

Octave Down Press (Scale Select Down)

Octave Up Press (Scale Select Up)

Synth playback mode

Power On

Octave 1

Major

Octave 2

Sequence 1

Sequence 2

Sequence 3

Sequence 4

Sequence 5

Sequence 6

Sequence 7

Sequence 8

Octave 3

Minor

Octave 4

Power On

Modulation speed 1

Modulation speed 2

Modulation speed 3

Modulation speed 4

Modulation speed 5

Modulation speed 6

Sequencer speed

Playback mode or edit mode synth 1-8

Carrier Frequency synth 1

Carrier Frequency synth 2

Carrier Frequency synth 3

Carrier Frequency synth 4

Carrier Frequency synth 5

Carrier Frequency synth 6

Carrier Frequency synth 7

Carrier Frequency synth 8

Sequence1

Sequence2

Sequence3

Sequence4

Sequence5

Sequence6

Sequence7

Sequence8

- Button Combinations:
- Scale Select:

Button 1 + Button 2 + (Button 7[Scale Down] or Button 8[Scale Up])
- Scale and Octave reset:

Button 1 + Button 2 + Button 3
- Copy synth 1 setting to all other synths:

Button 7 + Button 8
- Save settings:

Button 1 + Button 8
- Reverse step direction:

Move sequencer speed pot all the way to the right for 1 second