

G - Creating a Reference Callout

In this exercise, you create a callout in the section view of the building model to reference the door detail that you previously created.


Dataset

Continue to use the dataset you used in the previous exercise, *m_Drafting_views.rvt*.

Create the callout view

1. In the Project Browser, expand Views (all), expand Sections, and double-click Section 1.


The section view is displayed.

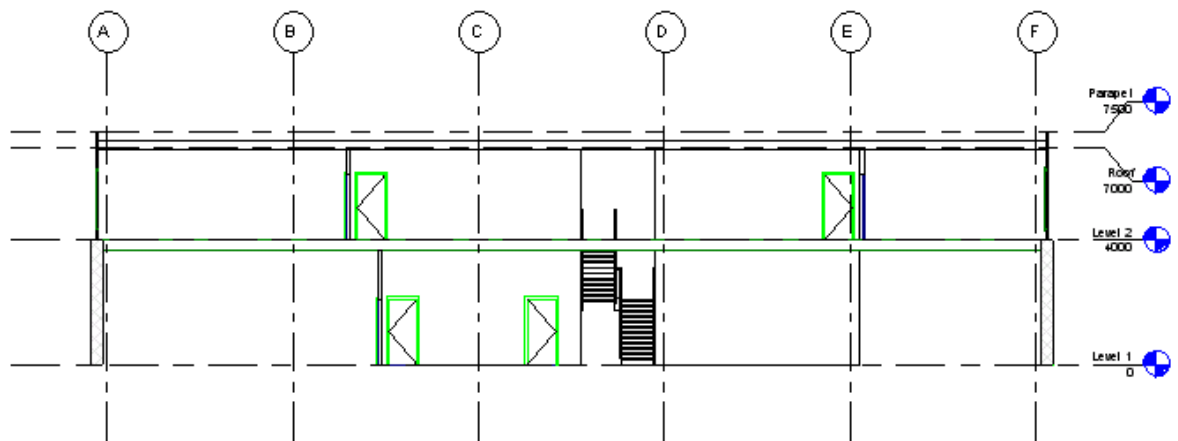

2. On the View tab of the Design Bar, click Callout.
3. On the Options Bar, select Reference other view, and select Drafting View: Door Detail (1/A101).


NOTE: When a view has been placed on a sheet view, it appears in the Reference other view list with the detail number and sheet number displayed after the view name.

4. Zoom in on the Level 1 doors.
5. Add the callout bubble by dragging a rectangular bubble over the upper left door corner.

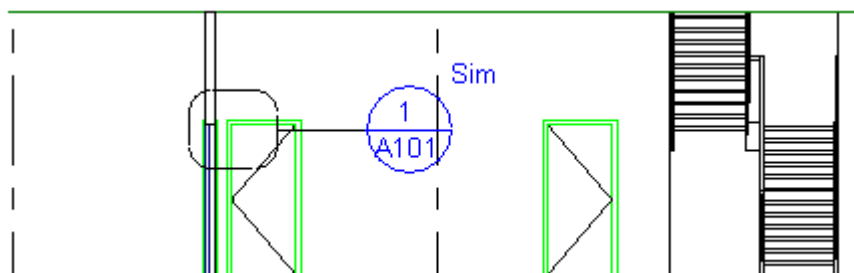

6. Select the callout, and use the callout grips to move the callout head.


The callout head displays the detail and sheet information (1/A101) because the referenced drafting view is already placed on this sheet.

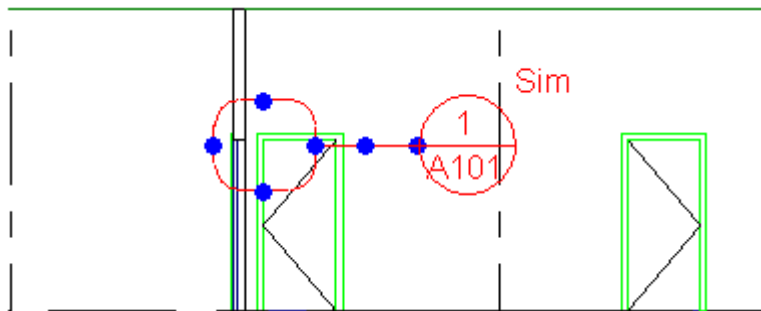

Display the reference view

7. On the Design Bar, click Modify, and double-click the callout.

The door detail that you drafted previously is displayed.

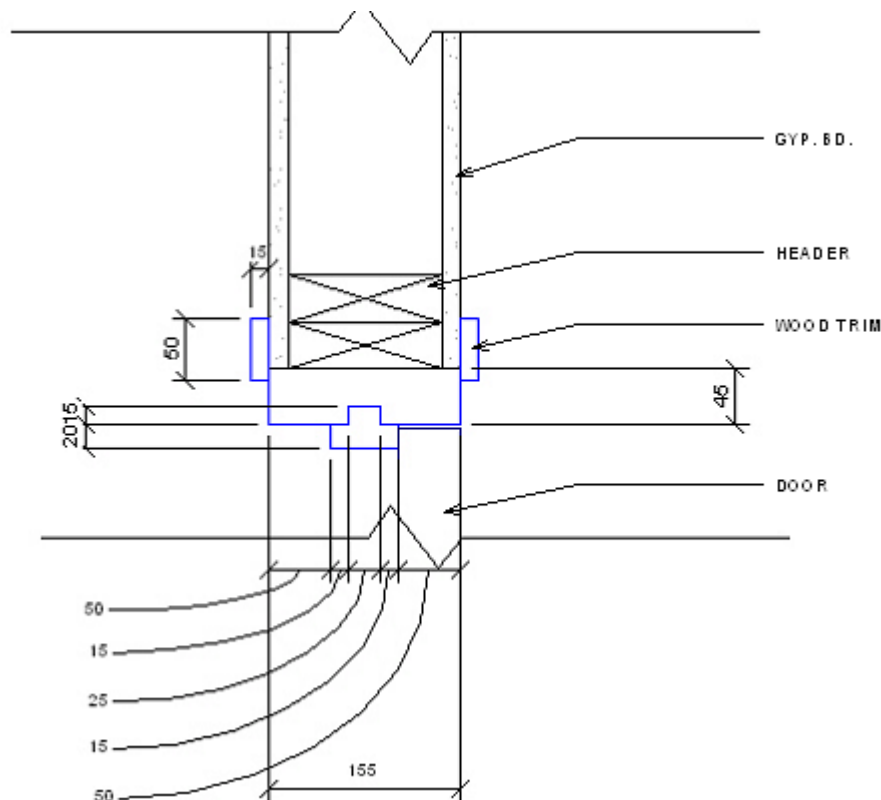

8. If you want to save your changes, on the File menu, click Save As, and save the exercise file with a unique name. Otherwise, close the exercise file without saving your changes.