

Creating a Quick and Realistic Silicone Makeup Appliance


Using Smooth Cast® 300 to make a flat resin mould and Dragon Skin® FX-Pro® Silicone to make an appliance



1 The original wound is sculpted out of non-sulfur clay, on a plastic base.



2 A clay wall is built around the sculpted wound using non-sulfur clay.

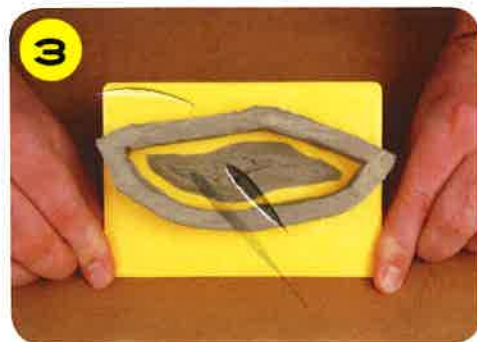


3 The prepared sculpture surrounded by the clay wall.



4 Universal Mold Release® is sprayed onto all surfaces.



5 Smooth Cast® 300 is measured 1A:1B by volume. The two parts are combined.

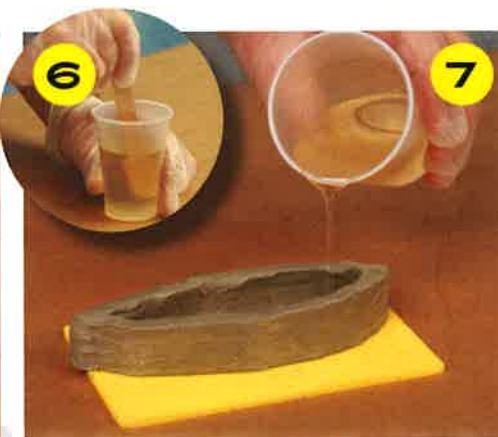

6 The liquid plastic is mixed and slowly poured over the sculpted appliance.



The Smooth Cast® 300 cures in 10 minutes to a rigid plastic.



10 The mould is removed from the sculpt and cleaned with isopropyl alcohol and a brush.



11 Any rough edges are sanded off.



8 After the resin cures, the clay mould wall is removed.

OVER →